


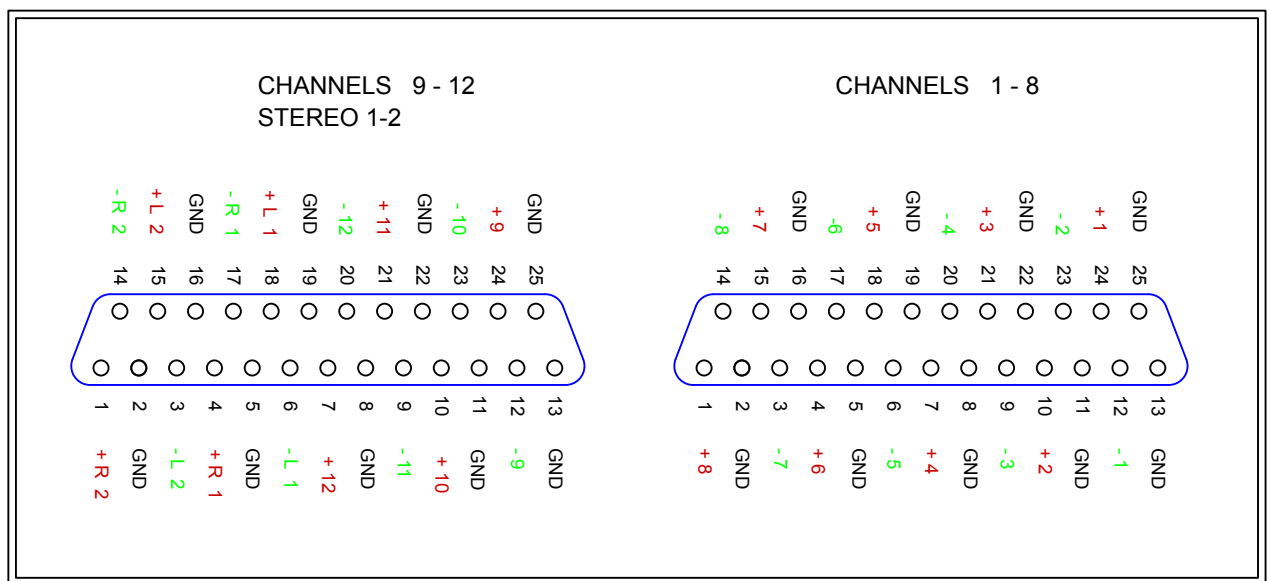


LA -126

CONNECTORS DB 25
OUTSIDE REAR VIEW



LA-126 REMOTE CONTROL

TRS Jack 1/4 inch (6.35mm)

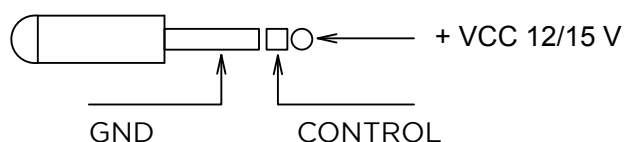

Livio Argentini

INSERT THE JACK WHEN ONLY WHEN
THE UNIT IS TURNED OFF

THE INSERTION OF THE REAR JACK DEACTIVATES
THE CONTROL ON THE FRONT PANEL

THE INSERTION OF THE FRONT JACK DEACTIVATES
BOTH THE CONTROL ON THE FRONT PANEL
AND THE REMOTE INSERT ON THE REAR JACK

LA-126 LEVEL CONTROL



Livio Argentini

- 1 THE CORRECT USE OF THE LA-126 UNIT REQUIRES A PROPER LEVEL REGULATION PROCEDURE
- 2 SET SPEAKER LEVEL CONTROL TO ZERO TO AVOID POSSIBLE DAMAGE OF THE DIFFUSERS
- 3 SEND TO THE LA-126 UNIT THE SIGNAL WITH THE RIGHT WORK LEVEL
- 4 SET THE LEVEL CONTROL OF THE LA-126 UNIT IN POSITION "TWO O'CLOCK"
- 5 INCREASE THE EXTERNAL AMPLIFIER LEVEL CONTROL IN ORDER TO HAVE THE CORRECT LISTENING LEVEL
- 6 IN SOME CASES IT IS NECESSARY TO INSERT AN EXTERNAL ATTENUATOR AT THE AMPLIFIERS'S INPUT