


Livio Argentini


# LA-126 MONITOR CONTROLLER

## CONNECTORS DB 25

### CHANNELS 9 - 12 STEREO 1-2

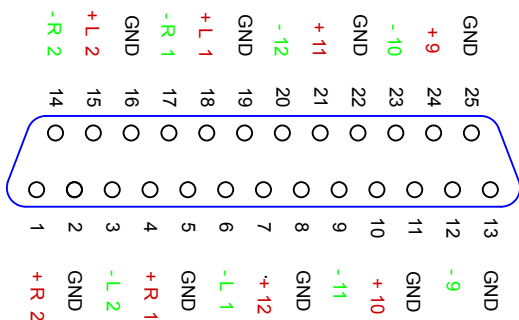

### CHANNELS 1 - 8

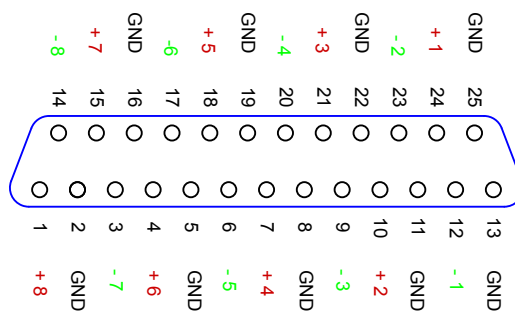

## OUTSIDE REAR VIEW






Livio Argentinini

# LA-126 MONITOR CONTROLLER

## LEVEL CONTROL

- 1 THE CORRECT USE OF THE LA-126 UNIT REQUIRES A PROPER LEVEL REGULATION PROCEDURE
- 2 SET SPEAKER LEVEL CONTROL TO ZERO TO AVOID POSSIBLE DAMAGE OF THE DIFFUSERS
- 3 SEND TO THE LA-126 UNIT THE SIGNAL WITH THE RIGHT WORK LEVEL
- 4 SET THE LEVEL CONTROL OF THE LA-126 UNIT IN POSITION "TWO O'CLOCK"
- 5 INCREASE THE EXTERNAL AMPLIFIER LEVEL CONTROL IN ORDER TO HAVE THE CORRECT LISTENING LEVEL
- 6 IN SOME CASES IT IS NECESSARY TO INSERT AN EXTERNAL ATTENUATOR AT THE AMPLIFIERS'S INPUT

## REMOTE CONTROL

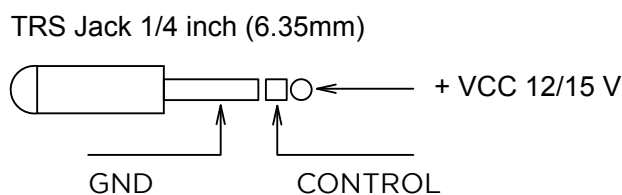

INSERT THE JACK WHEN ONLY WHEN THE UNIT IS TURNED OFF

THE INSERTION OF THE REAR JACK DEACTIVATES THE CONTROL ON THE FRONT PANEL

THE INSERTION OF THE FRONT JACK DEACTIVATES BOTH THE CONTROL ON THE FRONT PANEL AND THE REMOTE INSERT ON THE REAR JACK