


FOX GETTING STARTED

This quick guide illustrate the very first steps to get started with your new FOX board. More documentation is available on <http://www.acmesystems.it>.


STEP 1

Plug a regulated +5 VDC power supply on J2 connector with pin 1 to +5 VCC and pin 2 to GND. The green LED DL3 indicates the power on state.

After a few seconds the red LED DL1 will start to blink, showing that Linux is running and ready to operate.

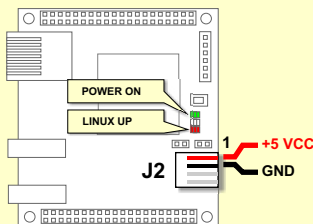


STEP 2

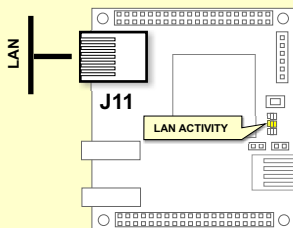

Plug your LAN cable to the RJ45 connector J11. This is a 10/100Mbit Ethernet port. Yellow LED DL2 will blink to indicate LAN activity.

The factory default network IP address is: **192.168.0.90**
Try to get access to the FOX board with your browser, telnet or FTP client. The factory default login is:
User=**root** Password=**acme**

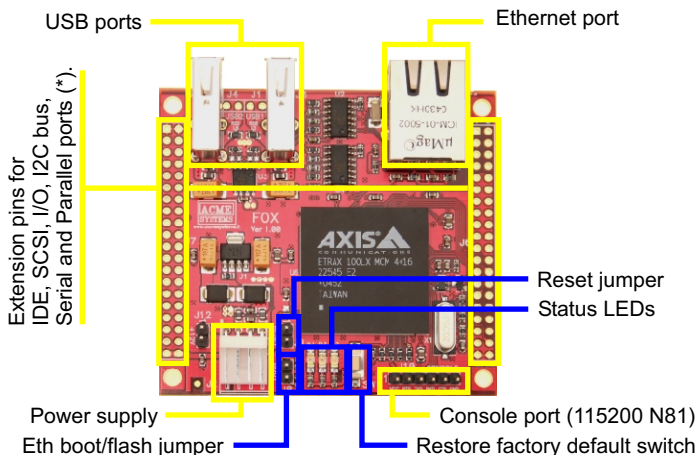

(*) All the logic levels are at 3.3 Volt (5 Volt tolerant).